



REMEMBER:

Before installing or adjusting your sights, unload and/or check to ensure the firearm is unloaded.

HK 91, 93, 93, MP5 – Front Sight Installation

1. Place the gun in a padded vise.
2. Drive out the front sight roll pin from the muzzle side.
3. Remove the front sight.
4. Install the XS front sight.
5. Line up the hole in the sight with the hole in the front sight tower, then reinstall the roll pin from the breech side.

HK 91, 93, 94, MP5 – Rear Sight Installation

1. Remove the large Phillips-head rear sight mounting screw.
2. Remove the factory rear sight, but leave the factory windage screw in place.
3. Install the XS rear sight using the factory sight oval washer, star lock washer, and screw.

Sight Adjustment

Elevation: Loosen the elevation lock screw located on the right side of the sight. Turn the aperture clockwise to lower the Point of Impact (POI), counterclockwise to raise POI. Once adjusted then tighten the screw.

Windage: Adjustments work in the same manner as the factory rear sight.