



S&W M&P 2.0 Magazine Extension

You will need:

- Factory Magazine
- Small flat head or punch

Items provided with the kit:

- Magazine Extension

Before working on your firearm, unload and/or check to ensure that the firearm is unloaded.

Removing the Factory Base Plate

- Using a small flat head screwdriver or a punch to depress the factory base plate and slide the bottom plate forward off the magazine body.



Caution: Once the base plate clears the front of the magazine body, the internal contents will no longer be held in place by tension and can launch themselves.

- Remove plastic base and locking piece.

Installing the Magazine Extension Assembly

1. Verify that the locking pin at the front of the magazine extension can be depressed in its current condition.
2. Take the factory magazine follower and spring and compress them within the magazine body.
3. Slide the magazine body rearward in the corresponding slot within the magazine extension.
4. You will hear the magazine spring seat itself first, followed by the locking pin engaging with the front of the magazine body.

Removing the Magazine Extension Assembly

1. Depress the locking pin with a small flat head screwdriver.
2. While keeping the pin depressed begin to slide the magazine body forward.
 - a. If it does not want to slide forward wiggle it back and forth while keeping constant pressure towards the front of the assembly.
3. Once you get the “ears” of the magazine body to clear the magazine extension the spring will cause the magazine body and magazine extension to separate.

Questions or Problems? Ask the XS Tech Team: (888) 744-4880 | tech@xssights.com