



**REMEMBER:**

Before installing or adjusting your sights, unload and/or check to ensure the firearm is unloaded.

**M1A/M-14 Front Sight Installation**

1. Note location of original front sight, as it may not be on centerline. Gross windage adjustments are accomplished here.
2. Loosen Allen screw (3/32 wrench) and remove screw. Then slide sight off of dovetail.
3. Transfer Allen screw to new front sight and slide sight onto dovetail. Do not use red threadlocking compound on screw.
4. Position sight as close as possible to original placement. Tighten Allen screw.
5. Once front sight location is finalized, apply red threadlocking compound around perimeter of dovetail only.