



REMEMBER:

Before installing or adjusting your sights, unload and/or check to ensure the firearm is unloaded.

Ruger Revolver Adjustable Replacement Blade

1. Remove the windage adjustment screw from the right side of the sight and set aside.
2. The sight blade will be pushed to the right by the internal spring. Looking down at the sight body from the top, you will see a small notch on the forward edge of the slot that the blade rides.
3. Carefully push the sight blade to the left until you can lift the blade up. There is a small bump on the bottom front edge of the blade that retains the blade in the slot. Match the bump in the blade to the notch in the sight body and remove. CAUTION: There is a spring hooked to the left side of the blade. When you remove the blade, take care so the spring does not launch out of the sight body.
4. Start the Express Sight replacement blade into the slot with the bump on the front edge of the notch.
5. Using a very small punch or Allen wrench, press the spring down into the sight body until the blade will easily slide down through the notch and into the slot.
6. Reinstall the windage screw and center the blade in the sight body.
7. Wipe sights down with protective oil in a light coating to prevent potential rust issues.